


MausoGuard™

INSTALLATION INSTRUCTIONS


1. Open bag inside tray box. Remove contents: 1-bag, 1-bag rivets, 1 bag plastic BBs. (BBs are used later by placing in 1st half of crypt for ease of sliding in sealed tray and contents.)
2. Remove twist ties around locking rails and set rails aside.
3. Position tray on lift or ground.



4. Position casket in tray.

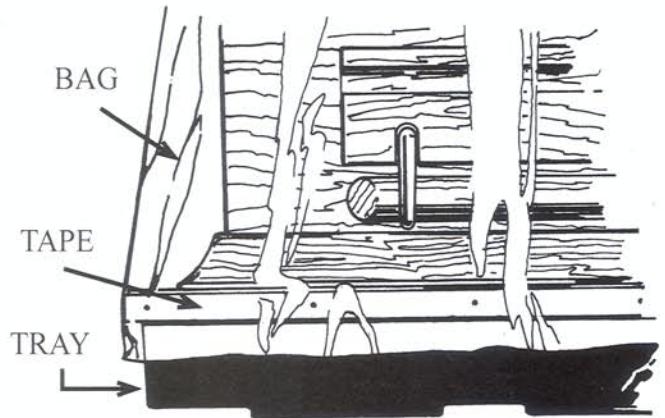

5. Unfold the bag and drape over casket. Align seams at the ends of the bag to the corners of the tray. Pull the bag over the rolled edge of the tray for a distance of 1 1/2 inches. With the bag pulled over the rolled edge all the way around the tray, reach under the bag and gently pull protective backing off the tape. Press bag against exposed tape while continuing to remove the backing.

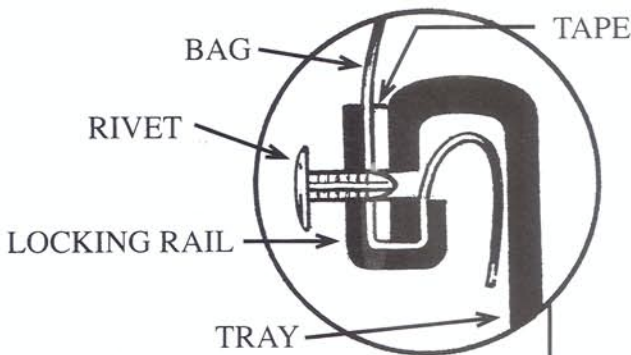

6. Reposition locking rails covering the bag at the rolled edge. Push rivets into the pre-drilled rail until rivet is flush with surface.